



Nr.	Part nr.	Name
001	158875-2	neusstuk voor schroefmachine
002	424163-2	DUST SEAL SLEEVE FS4000/6300
003	424235-3	SEAL RING FS2500
005	233974-2	RING SPRING 33 FS2500/6300
006	232245-4	LEAF SPRING BFS440/450
007	266361-0	TAPPING SCREW 4X30 9554NB
008	158883-3	GEAR HOUSING HP CPL FS4000
009	232050-9	LEAF SPRING 6827
010	216001-0	STEEL BALL 3,5 6836-BTP130/140
011	324983-3	SPINDLE 125N FS4000
016	233126-5	COMPRESSION SPRING 6 FS2500
017	268229-6	COLLARED PIN 8 FS4000
019	216415-3	THRUST NEEDLE GAUGE 821 FS2500
020	216212-7	WASHER 821 FS2500/2701/4000
021	424162-4	SEAL RING FS4000/6300
022	158874-4	GEAR HOUSING COVER CPL FS4000
023	451099-2	RING 7 FS2500/4000
024	210007-0	KOGELLAGER 608
025	240083-0	FAN 52 HR1830
026	515759-1	ARMATURE ASSY 240V FS4000
027	681636-0	INSULATION WASHER 6827-HR2432
028	210062-2	BALL BEARING 607ZZ MT953
029	421868-5	LABYRINTH RUBBER RING 19GA5030
030	266467-4	TAPPING SCREW 4X50 FS2500
031	450880-8	BAFFLE PLATE FS2500
032	633693-4	FIELD 220-240V FS2500
033	450885-8	MOTOR HOUSING L2 FS4000
034	162272-6	HOOK FS2500
035	866602-0	NAAMPLAAT "FS4000"
036	808575-1	INDICATIELABEL 4000RPM FS4000
037	689111-0	SPACER HR2440
038	191962-4	CARBON BRUSH CB-419 JR1000FTK
039	643948-9	BRUSH HOLDER DP4001
040	643951-0	BRUSH HOLDER DP4001
041	687124-5	STRAIN RELIEF MT953-HP1631
042	650614-1	SWITCH FS2500
043	158878-6	HANDLE COVER L CPL FS2500/4000
044	266374-1	TAPPING SCREW 4X25 GA9020(S)
045	266374-1	TAPPING SCREW 4X25 GA9020(S)
047	646122-8	CHOKE COIL FS2500
048	645253-0	CAPACITOR UT1305/2204-FS2500
049	265995-6	TAPPING SCREW 4X18 JR3050-60T
050	682559-5	CORD GUARD 8 9554NB-JR1000FTK
051	695034-2	NETSNOER 2X1.00 4.0MTR P
018A	226687-2	HELICAL GEAR 41N FS4000
018B	226687-2	HELICAL GEAR 41N FS4000



Nr.	Part nr.	Name
004-1	455591-0	LOCK RING
018-1A	227769-3	TANDWIEL 41N FS4000 A
018-1B	227769-3	TANDWIEL 41N FS4000 A
018-1C	227769-3	TANDWIEL 41N FS4000 A