



Nr.	Part nr.	Name
001	286263-4	CAP 35 HR2440/2460/2470
002	233940-9	RING SPRING 19 HR2020/2432
003	417629-9	CHUCK COVER HR2440/2460/2470
004	257241-1	RING 21 HR1830/2020/2230/2440
005	345187-4	GUIDE WASHER HR2440/2460/2800
006	233916-6	CONICAL SPRING 21-29 HR1830
007	921923-8	ZESKANTBOUT M8X120MM P
008	345280-4	HEX WASHER HP2051F-BHR202/261T
009	417630-4	GRIP BASE HR2230/2460
010	158057-6	GRIP 36 HR2460/2470
013	162245-9	CHANGE LEVER HR2470
014	233459-8	COMPRESSION SPRING 3 HR2230
015	419192-8	LOCK BUTTON HR2230
016	213278-8	O RING 17 HR1830/2230/2460
017	158216-2	GEAR HOUSING CPL HR2470
018	266351-3	TAPPING SCREW 4X35 DCS230T
019	153290-5	NEEDLE BEARING CPL HR2230
020	961017-7	STOPRING E-3 HR2432/2470
021	417796-0	GUIDE BASE HR2450
022	233344-5	COMPRESSION SPRING 4
023	163430-7	LOCK PLATE CPL HR2440/2470
024	266374-1	TAPPING SCREW 4X25 GA9020(S)
025	233929-7	RING SPRING 29 HP2450T
026	267460-1	REKET 31 BHR241 A
027	233401-9	COMPRESSION SPRING 32 HR2450T
028	227109-5	SPUR GEAR 51 HR2450T
029	216022-2	STEEL BALL 7,0 HR1830/2432
030	158574-6	TOOL HOLDER CPL BHR202/261
031	267229-3	FLAT WASHER 28 HR2230
032	331769-8	SLEEVE 9 HR2800
033	324669-9	IMPACT BOLT HR2230/2800
034	324402-9	RING 10 BHR202/261/261T
035	421955-0	CUSHION RING 13 HR2460
036	324216-6	O RING CASE HR2440-BHR261/261T
037	213073-6	O RING 9 HR2460-BHR202/261T
038	233917-4	RING SPRING 28 HR2800/2811FT
039	324214-0	STRIKER HR2432
040	213227-5	O RING 16 HK0500-BHR261
041	318132-2	PISTON CYLINDER HR2470
042	267104-3	FLAT WASHER 12 BHR202
043	324215-8	PISTON JOINT HR2440
044	267104-3	FLAT WASHER 12 BHR202
045	213727-5	O RING 63 HR2460
047	961003-8	RETAINING RING S-7 HR2432
048	233343-7	COMPRESSION SPRING 7 HR2450
049	227179-4	SPUR GEAR 10 HR2470

Nr.	Part nr.	Name
050	324668-1	CAM SHAFT HR2470
051	331992-5	KOPPELINGSPLAAT BHR262 A
052	219014-0	BEARING 10 HR2432/2230/2460
053	226632-7	HELICAL GEAR 25 BHR202
054	266273-7	HEX SOCKET HEAD BOLT M4X12
055	345179-3	BEARING RETAINER HR2440
056	267234-0	FLAT WASHER 8 HR2432
058	324212-4	RING 8 HR2432
059	961011-9	STOPRING E-4 LF1000-HR2230
060	941102-2	FLAT WASHER 5 BHR202/261/261T
061	233342-9	COMPRESSION SPRING 6 HR2432
062	345363-0	CHANGE PLATE HR2432/2470
063	141574-3	LAGERHUIS HR2470 A
065	213407-3	O RING 26 HR2230/4511C
066	213077-8	OIL SEAL 10 HR2460-BHR202
067	210059-1	KOGELLAGER HR4000C SPECIAAL
068	267213-8	FLAT WASHER 10 HR2230
069	240092-9	FAN 64 HR2470
070	519226-8	ARMATURE ASSY 18V BHR202
071	253823-7	FLAT WASHER 7 LF1000-BHR202
072	210023-2	BALL BEARING 627DDW HR2230
073	267816-8	WAVE WASHER 15 BHR202
074	815F22-1	DHR202 NAME PLATE
075	188515-8	HOUSING SET BHR202
076	638020-0	YOKE UNIT BTW200SH
077	638977-5	KOOLB.HOUDER BHR202 L+R(3CON)A
079	266326-2	TAPPING SCREW 4X18 HR2800/11FT
080	911011-9	SCHROEF M3X10MM
081	689070-8	HEAT SINK BJV140/180
082	188515-8	HOUSING SET BHR202
083	424128-4	HOLDER CAP COVER BHR202
084	643829-7	HOLDER CAP BHR202
085	194435-6	CARBON BRUSH CB-441 BHR202
086	424111-1	SWITCH COVER BHR202
087	450615-7	F/R CHANGE LEVER BHR202
088	638882-6	SCHAKELAAR BHR202 (3 CONT.)
089	631792-6	LIGHT CIRCUIT BHR202
090	266326-2	TAPPING SCREW 4X18 HR2800/11FT
091	644808-8	AANSLUITUNIT BHR241 (3 CONT) A
092	187212-3	BATTERIJHUIS BHR241 (3 CONT.)
093	263036-2	RUBBER PIN 5 BTW250/251
094	268184-2	PIN 1.5 BTW152/250/251
095	187212-3	BATTERIJHUIS BHR241 (3 CONT.)
096	266326-2	TAPPING SCREW 4X18 HR2800/11FT
097	424042-4	CUSHION RUBBER BHR202
098	424476-1	DEMPINGS VILT BHR242 A

Nr.	Part nr.	Name
099	424042-4	CUSHION RUBBER BHR202
046H	211012-0	BALL BEARING 606ZZ HR1830/2460
046I	211012-0	BALL BEARING 606ZZ HR1830/2460
046L	211012-0	BALL BEARING 606ZZ HR1830/2460
046M	211012-0	BALL BEARING 606ZZ HR1830/2460
046N	211012-0	BALL BEARING 606ZZ HR1830/2460
046O	211012-0	BALL BEARING 606ZZ HR1830/2460
057H	211032-4	BALL BEARING 608ZZ 6412/6413
057I	211032-4	BALL BEARING 608ZZ 6412/6413
057L	211032-4	BALL BEARING 608ZZ 6412/6413
057M	211032-4	BALL BEARING 608ZZ 6412/6413
057N	211032-4	BALL BEARING 608ZZ 6412/6413
057O	211032-4	BALL BEARING 608ZZ 6412/6413
046-1H	210028-2	BALL BEARING 606ZZ UC3020A
046-1I	210028-2	BALL BEARING 606ZZ UC3020A
046-1L	210028-2	BALL BEARING 606ZZ UC3020A
046-1M	210028-2	BALL BEARING 606ZZ UC3020A
046-1N	210028-2	BALL BEARING 606ZZ UC3020A
046-1O	210028-2	BALL BEARING 606ZZ UC3020A
046-1P	210028-2	BALL BEARING 606ZZ UC3020A
046-1Q	210028-2	BALL BEARING 606ZZ UC3020A
057-1H	210029-0	BALL BEARING 608ZZ JR3050T
057-1I	210029-0	BALL BEARING 608ZZ JR3050T
057-1L	210029-0	BALL BEARING 608ZZ JR3050T
057-1M	210029-0	BALL BEARING 608ZZ JR3050T
057-1N	210029-0	BALL BEARING 608ZZ JR3050T
057-1O	210029-0	BALL BEARING 608ZZ JR3050T
057-1P	210029-0	BALL BEARING 608ZZ JR3050T
057-1Q	210029-0	BALL BEARING 608ZZ JR3050T