



Nr.	Part nr.	Name
001	187938-7	HOUSING SET
002	325635-9	GUIDE BOLT BST220
003	265995-6	TAPPING SCREW 4X18 JR3050-60T
004	345907-6	FIX PLATE BST220
005	253762-1	FLAT WASHER 8 BPT350
006	234060-2	COMPRESSION SPRING 9 BST220
007	234101-4	COMPRESSION SPRING 13 BST220
008	424135-7	SPRING HOLDER BST220
009	345978-3	GUIDE PLATE BST220
010	345906-8	UPPER PLATE BST220
012	234078-3	COMPRESSION SPRING 4 BST220
013	450539-7	FRONT COVER BST220
014	265995-6	TAPPING SCREW 4X18 JR3050-60T
015	268157-5	PIN 4 BPT350
016	345996-1	DRIVER BST220
017	922227-1	HSH BOLT M5X18 BST220/221
018	266201-2	INBUSBOUT M4X14 P
019	266199-3	HSH BOLT M4X6 BST220/221
021	158759-4	DRIVER GUIDE CPL BST220/221
022	345910-7	SPRING BASE BST220/221
023	344670-8	SET PLATE BST220/221
024	256206-0	PIN 4 HM1810
025	313150-5	DRIVER LOCK BST220
026	424099-5	CUSHION BST220
027	253804-1	FLAT WASHER 6 BST221
028	318267-9	HOLDER BST220/221
029	931302-2	HEX NUT M6 HR4011C/3210FCT
030	265995-6	TAPPING SCREW 4X18 JR3050-60T
031	331842-4	MAGAZIJN BST221 A
032	911113-1	PAN HEAD SCREW M4X10 LF1000
033	450540-2	END CAP BST220
034	911113-1	PAN HEAD SCREW M4X10 LF1000
035	345997-9	PUSHER BST220
037	231854-6	TENSION SPRING 3 BST220
038	165532-5	SUB MAGAZINE BST220
039	450775-5	ADJUSTER BASE BST220
040	231323-7	COMPRESSION SPRING 9 BST220
041	450702-2	ADJUSTER BST220
042	450774-7	LOCK SLEEVE BST220
043	265127-5	SCREW M4X4 BFT040FZ
044	268029-4	PIN 4 BST220
045	421637-4	MAGAZINE END BST220
046	233528-5	TORSION SPRING 5 BST220
047	345861-4	LEVER BST220
048	961017-7	STOPRING E-3 HR2432/2470
049	165506-6	HAMMER BST220

Nr.	Part nr.	Name
050	345914-9	SLIDE PLATE BST220
051	343629-2	PLATE T221DW
052	257772-0	SLEEVE 5 BST220/221
053	158646-7	SPUR GEAR 55 CPL BST220
054	253171-4	FLAT WASHER 10 HR2800
055	324947-7	PIN 10 BST220
056	265995-6	TAPPING SCREW 4X18 JR3050-60T
057	233531-6	TORSION SPRING 3 BST220
058	651891-8	SWITCH 6900DW 6835-BST220
059	232240-4	LEAF SPRING BST220
060	345908-4	RELEASE PLATE BST220
061	256221-4	PIN 3 BST220
062	450536-3	TRIGGER BST220
063	256221-4	PIN 3 BST220
064	424026-2	CUSHION BTW250/251
065	424030-1	CUSHION BST220
066	644812-7	TERMINAL
067	187938-7	HOUSING SET
068	265995-6	TAPPING SCREW 4X18 JR3050-60T
069	911163-6	SCREW M4X35 BPT350
070	911163-6	SCREW M4X35 BPT350
071	815X68-5	DST221 NAME PLATE
072	214058-5	PLANE BEARING 10 BST220/221
073	253758-2	SLUITRING 10 A
074	232241-2	LEAF SPRING BST220/221
075	158647-5	SPUR GEAR 7 CPL BST220/221
076	221961-3	SPUR GEAR 27 T221DW
077	221999-8	INTERNAL GEAR 69 T221DW
078	267053-4	FLAT WASHER 12 BPT350
079	629125-7	DC MOTOR
011G	165602-0	SAFETY LEVER BST220/221
011H	165602-0	SAFETY LEVER BST220/221
011K	165602-0	SAFETY LEVER BST220/221
011L	165602-0	SAFETY LEVER BST220/221
011M	165602-0	SAFETY LEVER BST220/221
020G	451801-3	SAFETY LEVER GUIDE BST220/221
020H	451801-3	SAFETY LEVER GUIDE BST220/221
020K	451801-3	SAFETY LEVER GUIDE BST220/221
020L	451801-3	SAFETY LEVER GUIDE BST220/221
020M	451801-3	SAFETY LEVER GUIDE BST220/221
011-1G	161468-6	SAFETY LEVER
011-1H	161468-6	SAFETY LEVER
011-1K	161468-6	SAFETY LEVER
011-1L	161468-6	SAFETY LEVER
011-1M	161468-6	SAFETY LEVER
011-1N	161468-6	SAFETY LEVER



Nr.	Part nr.	Name
020-1G	456800-0	SAEFTY LEVER GUIDE
020-1H	456800-0	SAEFTY LEVER GUIDE
020-1K	456800-0	SAEFTY LEVER GUIDE
020-1L	456800-0	SAEFTY LEVER GUIDE
020-1M	456800-0	SAEFTY LEVER GUIDE
020-1N	456800-0	SAEFTY LEVER GUIDE