



Nr.	Part nr.	Name
001	158472-4	KNOB 60 CPL BUC122
002	267004-7	FLAT WASHER 6 BUC122
003	158471-6	SPROCKET COVER CPL BUC122
004	961014-3	STOPRING E-8 BSS500/610
005	221527-9	
006	267732-4	LOCK WASHER 12 BUC122
007	232238-1	LEAF SPRING BUC122
008	265995-6	TAPPING SCREW 4X18 JR3050-60T
009	265995-6	TAPPING SCREW 4X18 JR3050-60T
010	450213-7	BEARING HOUSING BUC122
011	323806-2	SPINDLE BUC122
012	211051-0	BALL BEARING 609LLB 2704
013	226673-3	HELICAL GEAR 50 BUC122
014	450436-7	CAM BUC122
015	210033-9	BALL BEARING 696ZZ GA5030
016	450435-9	CRANK BUC122
017	213993-4	O RING 1.5 BUC122
018	158571-2	OIL PUMP CPL BUC122
019	421615-4	CONNECTOR BUC122
020	158810-0	TANK CAP CPL BUC122
022	158634-4	OIL TANK CPL BUC122
023	187237-7	HANDGREEPSET BUC122 (3 CONT.)A
024	231470-4	COMPRESSION SPRING 6 194524-7
025	416178-3	LOCK-OFF BUTTON UC3020A/3520A
026	651956-6	SWITCH LS800D-BSS610-BUC122
027	450212-9	SWITCH LEVER 194523-9
028	644808-8	AANSLUITUNIT BHR241 (3 CONT) A
029	257363-7	RING 30
030	265995-6	TAPPING SCREW 4X18 JR3050-60T
031	619225-1	ARMATURE BUC122
032	638138-7	YOKE UNIT 6347DW
033	638608-6	ENDBELL CPL BUC122
034	188468-1	MOTOR HOUSING SET BUC122
035	815W45-1	DUC122 NAME PLATE
036	188468-1	MOTOR HOUSING SET BUC122
037	266050-7	TAPPING SCREW PT4X30 6827
038	191971-3	CARBON BRUSH CB-430 6343DW
039	643954-4	BRUSH HOLDER CAP BGA452
040	187237-7	HANDGREEPSET BUC122 (3 CONT.)A
041	265995-6	TAPPING SCREW 4X18 JR3050-60T
042	158474-0	FRONT HAND GUARD CPL BUC122
043	266050-7	TAPPING SCREW PT4X30 6827
044	450217-9	FRONT HANDLE BUC122
045	266050-7	TAPPING SCREW PT4X30 6827
046	265995-6	TAPPING SCREW 4X18 JR3050-60T
047	259041-5	PUSH NUT 8 UC3020A



Nr.	Part nr.	Name
048	443125-1	FILTER UC3020A